

TRISTAR



service
.tristar.eu

EN | Instruction manual
 NL | Gebruiksaanwijzing
 FR | Mode d'emploi
 DE | Bedienungsanleitung
 ES | Manual de usuario
 IT | Manuele utente
 PT | Manual de utilizador
 SV | Bruksanvisning
 PL | Instrukcja obsługi
 CS | Návod na použití
 SK | Návod na použitie
 RU | Руководство по эксплуатации



MX 4154

PARTS DESCRIPTION / ONDERDELENBESCHRIJVING / DESCRIPTION DES PIÈCES / TEILEBESCHREIBUNG / DESCRIPCIÓN DE LAS PIEZAS / DESCRIZIONE DELLE PARTI / DESCRIÇÃO DOS COMPONENTES / BESKRIVNING AV DELAR / OPIS CZĘŚCI / POPIS SOUČÁSTÍ / POPIS SÚČASŤÍ / ПИСАНИЕ ЗАПЧАСТІ



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Do not allow children to use the device without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses.

PARTS DESCRIPTION

1. Cylinder block
2. Speed switch
3. Whisk
4. Whisk base
5. Stick blender
6. Lid
7. Bowl
8. Blades

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- Never use the mixer for longer than 1 minute continuously, after this allow the mixer to cool down for 5 minutes.

USE

Using the hand mixer

- You can use meat, heels. Do not chop chocolate, this may and cut food into a surface.

Storing the equipment

- Remove after each use from the holder on the cover in the Dekel. Place accessories holder

CLEANING AND MAINTENANCE

- Clean the accessories and the appliance after each use. The accessories are: the whisk, the beaters, the cleaners, scouring pads.
- Clean the appliance after each use. Use the cleaners, scouring pads.
- Never immerse the device in water. The device is not dishwasher safe.
- CAUTION! The knife is sharp. Never try it yourself. Avoid all bodily contact.

ENVIRONMENT



This appliance is made of durable materials to ensure a long end of its durability. At the end of its life, the appliance should be recycled. Recycling of used electrical appliances is an important issue. The recycling of used electrical appliances ensures the protection of our environment. Please regard the point of collection.

Support

You can find all available information on the

NL Gebruiksaanwijzing

VEILIGHEID

- De fabrikant aanvaardt geen aansprakelijkheid voor voortvloeiende schade van het gebruik van dit apparaat.
- Als het netsnoer beschadigd is, moet het worden vervangen door een geschikt onderdeel. Het is niet toegestaan personen met een gebrek aan kennis of vaardigheden het apparaat te gebruiken. Het is niet toegestaan het apparaat te gebruiken als u niet voldoende kennis heeft van de veiligheidsinstructies.
- Verplaats het apparaat niet met de trekken. Zwaar trekken kan het apparaat beschadigen en kan tot ernstige verwondingen leiden.
- De gebruiksaanwijzing moet altijd achterlaten en de instructies moeten worden gevolgd.
- Dit apparaat is niet geschikt voor gebruik en voor gebruik in de volgende omgevingen:
- Dit apparaat is niet geschikt voor kinderen jonger dan 8 jaar te gebruiken. Het is niet toegestaan kinderen jonger dan 8 jaar te gebruiken. Het is niet toegestaan kinderen jonger dan 8 jaar te gebruiken. Het is niet toegestaan kinderen jonger dan 8 jaar te gebruiken. Het is niet toegestaan kinderen jonger dan 8 jaar te gebruiken. Het is niet toegestaan kinderen jonger dan 8 jaar te gebruiken.
- Dit apparaat is niet geschikt voor gebruik in de volgende omgevingen:
 - Staff kitchen areas in shops, offices and other working environments.
 - By clients in hotels, motels and other residential type environments.
 - Bed and breakfast type environments.
 - Farm houses.



- Turn the engine clockwise to the whisk base until it clicks.
- Place the guard in the whisk base. To remove the guard from the whisk base, just pull out the guard from the whisk base.
- Plug in the power and select the speed switch to the desired speed. If you press one of the switches off the device directly, by releasing the switch stops the machine immediately. You can stir minor ingredients such as egg white, cream, instant desserts and eggs and sugar for cakes.

Using the chopper

- Turn the engine clockwise onto stainless steel stick until it clicks.
- To unlock the stick blender, twist the stick blender clockwise loose.
- Plug in the power and select the speed switch to the desired speed. If you press one of the switches off the device the device starts directly, by releasing the switch stops the machine immediately.
- Always use the delivered measuring cup for pureeing and chopping fruit, vegetables and small pieces of meat.

Using the chopper bowl

- Place the blade at the pivot point in the middle of the bowl.
- Attention! The knife is very sharp. Unscrew the lid clockwise to the bowl. Place the engine on the lid and turn it clockwise until it clicks.
- Plug in the power and select the speed the desired speed. If you press one of the switches the device starts directly, by releasing the switch stops the machine immediately.



WWW.TRISTAR.EU

Tristar Europe B.V. | Jules Verneweg 87
5015 BH Tilburg | The Netherlands

- houden, aan
met eetware
- **LET OP: De**
Vermijd fysici
reinigen van
oplopen.
 - Dit apparaat
soortgelijk g
– Personeelskeuke
– Door gasten in h
– Bed&Breakfast-t
– Boerderijen.

ONDERDELENBESC

1. Motorblok
2. Snelheidsschakel
3. Garde
4. Garde opzetstuk
5. Staafmixer
6. Deksel
7. Kom
8. Messen

VOOR HET EERSTE

- Haal het apparaat
de beschermfolie o

